



FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER:	
USAGE	R
0 Stager not used in controller (Wire harness included) C Stager is used in controller (Wire harness not included) [Not for individual Sale]	-
STAGER Rotary Pilot Stager Series to be Provided 48 6 Port (Brass) 51 8 Port (Brass) 58 16 Port (PVC)	-
PROGRAM Stager Program to be Provided *00 - 99 STANDARD **SS SPECIAL Program per Drawing Indicated TA Twin Alternating Softener (Model 48, and 58 Only) ^TB Twin Alternating Softener (w/ <u>Timed Brine</u> Pos. & switch output) ^TR Twin Alternating Softener (w/ <u>Timed Refill</u> Pos. & switch output) * Two character designation from standard stager drawing. ** Special Drawing number placed in last 5 digits of product number. (Special Drawing number also used for Aux. Sw. notched in more than 1 position) ^ For model 58 staggers ONLY	-
ENCLOSURE N.E.M.A. Rating of Panel & Enclosure to be Provided 7 NEMA 4 Mounting Plate w/Gasket on Staggers F NEMA 4X Fiberglass Panel & Enclosure	-
ELECTRICAL Power Required to Operate Device 1 115 Volts / 60 Hertz for 48 & 51 Staggers 115 Volts 50 or 60 Hertz for 58B Staggers 2 220 Volts / 50 or 60 Hertz for ALL STAGERS 5 24 Volts / 50 or 60 Hertz (for 48 & 51 Staggers Only) 9 12 Volts / 50 or 60 Hertz for ALL STAGERS N 24 Volts / 50 or 60 Hertz (for 48 & 51 Staggers Only) NXT Cam & Wire Harness	-
1st AUX. First Extra Switch to be provided on Rotary Pilot Stager SWITCH (Unless Special Drawing Number is Assigned) 0 NONE (Not valid for use with Pentair controllers) *^A to R CAM POSITION Switch is to be active (I & O not used) S SERVICE Return (Homing) (For Pentair Controllers, MUST be "S") W Status Lights Cam (48, & 58 Staggers w/TA Program only) Z BLANK CAM (no notches) * Use a Letter to indicate Cam position Not a Number. ^ Use SPECIAL DRAWING number if active in more than 1 position.	-
2nd AUX. Second Extra Switch to be provided on Rotary Pilot Stager SWITCH (Unless Special Drawing Number is Assigned) 0 NONE *^A to R CAM POSITION Switch is to be active (I & O not used) S SERVICE Return (Homing) (Not for 48-TA) T TIMED SWITCH OUTPUT (58-TB, signal in Pos. 2 & 7) TIMED SWITCH OUTPUT (58-TR, signal in Pos. 4 & 9) Z BLANK CAM (no notches) * Use a Letter to indicate Cam position Not a Number. ^ Use SPECIAL DRAWING number if active in more than 1 position.	-
PRESSURE Program of Stager (Unless Special Drawing Number is Assigned) 0 STANDARD (Vent to open) 1 INVERTED (Pressure to open)	-
0 (unless Special Drawing number is assigned)	-
REVISION Stager Revision Level (Unless Special Drawing Number is Assigned) B 48 and 51 Series Rotary Pilot Staggers C 58 Series Rotary Pilot Staggers	-